 

 


 

 

 

 

 

 



 

 

 
 
 












Originale	Sostituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 CH.List	 List
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Smart Hub	 Smart
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return/Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale	Sostituto
	Yellow		Yellow		
	Blue		Blue		
	E-Manual		D. Menu		
	3D		3D		
	D		Dual		
	Stop		Stop		
	<</ <<		<<		
	Play		Play		
	Pause		Pause		
	>>/>>		>>		

