
























 

 

 




Originale	Sostituto	Originale	Sostituto
Standby / On	 Power	Volume+	 Vol+
Muting	 Mute / Dimmer	Mode	 Smart / List
Play / Pause	 Play / Slow	Next/Prog+	 CH+ / Page+
Play / Pause	 Pause / Step / Freeze	Volume-	 Vol-
Stop	 Stop / Hold	Display	 Display / Media
I<< / Tuning-	 << / Tune-	Prev./Prog-	 CH- / Page-
>>I / Tuning+	 >> / Tune+	Tape 1 Rec	 1
I<< / Tuning-	 I<< / Preset-	Tape 1 Rew	 2
>>I / Tuning+	 >>I / Preset+	Tape 1 Play	 3
Sleep	 Sleep / Timer	Tape 1 F.FWD	 4
Program	 TV/Radio /	Tape 1 Hall/Ats	 5
Input/Source	 AV / Input / RDS	CD/Theater	 Red / Netflix / Search
MP3	 Up	Repeat	 Green / APP / Repeat
I<< / Tuning-	 Left	Tape 2 Pre./eq	 Yellow / YouTube / Repeat
Play / Pause	 OK	CD Random	 Blue / Prime Video / Random
>>I / Tuning+	 Right		
Stop	 Down		

