

 



 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Down / CH-	 Ch -
 Mute	 Mute	 Right / Vol+	 Right
 1	 1	 Right / Vol+	 Vol +
 2	 2	 Left / Vol-	 Left
 3	 3	 Left / Vol-	 Vol -
 4	 4	 OK / Store	 Ok
 5	 5	 P-	 Shift + Ch -
 6	 6	 P+	 Shift + Ch +
 7	 7	 EPG	 Guide
 8	 8	 Back	 Back
 9	 9	 i	 Info
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 Text	 Text
 Exit	 Exit	 Aspect	 Format
 Up / CH+	 Up	 Picture	 Shift + Format
 Up / CH+	 Ch +	 Audio	 Dual
 Down / CH-	 Down	 Sleep	 Sleep

Originale	Sostituto	Originale	Sostituto
 Down / CH-	 Ch -	 TV	 AUX
 Right / Vol+	 Right	 DVD	 REC MODE
 Right / Vol+	 Vol +	 PLAY MODE	 SOUND
 Left / Vol-	 Left	 AD	 SETTINGS
 Left / Vol-	 Vol -	 DISC NAV	 LIST
 OK / Store	 Ok	 DUAL	 SUBT
 P-	 Shift + Ch -	 PICTURE	 ECO
 P+	 Shift + Ch +	 SLEEP	 TV/R
 EPG	 Guide	 FORMAT	 3D
 Back	 Back	 E-MANUAL	 REPEAT
 i	 Info	 ZOOM	 TIMER
 Subtitle	 Subt	 D.MENU	 TEXT
 Menu	 Menu	 TOP MENU	 DISPLAY
 Exit	 Exit	 MENU	 INFO
 Up / CH+	 Up	 CLEAR	 EXIT
 Up / CH+	 Ch +	 RETURN	 BACK
 Down / CH-	 Down	 HOME	 SMART
 Sleep	 Sleep	 VOL+	 APP
		 CH-	 MEDIA
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	0
		0	FAV
		0	PRE-CH
		0	A
		0	B
		0	C
		0	D





Originale	Sostituto
 Red / TV/Radio	 Red
 Red / TV/Radio	 TV/R
 Green / FAV	 Green
 Green / FAV	 Pre Ch
 Yellow / List	 Yellow
 Yellow / List	 List
 Blue / +/-	 Blue
 All CH	 Smart
 White / ?	 Options

Originale	Sostituto

