







 

 

 

 























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Originale	Sostituto
 Recall	 Back / Return
 Display	 Display / Media
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 EPG	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-
 Open/Close	 Eject / Surround





Originale	Sostituto
Subtitle	Subtitle / EQ
CH List	Smart / List
Rec	Rec / Rec Mode
Rec List	D.Menu / Top
Tv/TXT/D.Pro	Text / Goto
Cancel/D.Rep	Shift + Exit / Cancel / Clear
Reveal/D.Goto	Setup / OPT /
Nicam/D.Slow	Audio / Lang I/II
I<</Index	I<< / Preset-
>>I/Hold	>>I / Preset+
Size/D.Zoom	Zoom / Size
Subpage/D.Title	Info / Angle
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold

Originale	Sostituto
Red/D.Set	Red / Netflix / Search
Green/D.Menu	Green / APP / Repeat
Yellow/D.Sub	Yellow / YouTube / Repeat
Blue/D.Lan	Blue / Prime Video / Random

