


 






 
 





 

 

 



 




 

 
 

 

 





 





 
 
 

 

 





 
 
 

 

 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Tv/Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		CH+		Ch +
	0		0		CH-		Ch -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		Media		Media
	Audio		Dual		USB		Smart
	Subtitle		Subt		Record		Rec





	Originale	Sostituto
	Stop	Stop
	⏮	⏮
	⏭	⏭
	Play	Play
	Pause	Pause
	<<	<<
	>>	>>
	Red	Red
	Green	Green
	Yellow	Yellow
	Blue	Blue

Originale	Sostituto

