






 









 



 










 











Originale	Sostituto
 Power	 Power
 O/D/N	 D.Menu / Top
 Sound / Title	 Sound / Title
 Shift + Back / Return	 Shift + Back / Return
 Source	 AV / Input / RDS
 Info / Angle	 Info / Angle
 Audio / Lang I/II	 Audio / Lang I/II
 Shift + Text / Goto	 Shift + Text / Goto
 Red / Netflix / Search	 Red / Netflix / Search
 Text / Goto	 Text / Goto
 Green / APP / Repeat	 Green / APP / Repeat
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Menu / Home	 Menu / Home
 Back / Return	 Back / Return
 CH+ / Page+	 CH+ / Page+
 Up	 Up

Originale	Sostituto
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 P-	 CH- / Page-
 Down	 Down
 Power DVD	 Shift + Power
 Play DVD	 Play / Slow
 Mute	 Mute / Dimmer
 DVD	 DVD
 Pause DVD	 Pause / Step / Freeze
 DVD	 DVD
 Freeze	 Shift + Pause / Step / Freeze
 I<< DVD	 I<< / Preset-
 Stop DVD	 Stop / Hold
 DVD	 DVD





Originale	Sostituto
ZOOM [<>]/Zoom	SIZE ZOOM Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
▼	SHIFT + Shift + Up
0	0
▲	SHIFT + Shift + Down
AV1	SHIFT + Shift + 1
AV2	SHIFT + Shift + 2
AV3	SHIFT + Shift + 3
AV4	SHIFT + Shift + 4

Originale	Sostituto
Timer	TIMER SLEEP Sleep / Timer
RGB1	LIST SMART Smart / List
RGB2	MEDIA DISPLAY Display / Media

