



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
DVD	Shift + 2
TV/AV Tv	TV/Radio /
Vol- Tv	Shift + Vol-
Tuner/Band	Shift + 6
1	1
2	2
3	3
Ext-In	Eject / Surround
4	4
5	5
6	6
FL Display	Display / Media
7	7
8	8

Originale	Sostituto
9	9
Vol+	Vol+
Cancel	Exit / Cancel / Clear
0	0
+10/-10	Guide / EPG / -/-
Vol-	Vol-
▼	Shift + Down
I<< Skip	I<< / Preset-
▲	Shift + Up
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Top Menu/Direct Navigator	D.Menu / Top
Up	Up



