
 













 









 

 




Originale	Sostituto
 Power	 Power
 Mode	 Smart
 Menu	 Menu
 Info	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Recall	 Pre Ch
 Back	 Back
 Rec	 Rec
 Media	 Media
 Play	 Play
 Pause	 Pause
 << REW	 <<
 Stop	 Stop

Originale	Sostituto
 >> FF	 >>
 I< / Page-	 I<<
 I< / Page-	 Ch -
 >I / Page+	 >>I
 >I / Page+	 Ch +
 Quality	 Red
 Disk Info	 Green
 Delete	 Blue
 Slow	 Options
 F1	 1
 F2	 2
 F3	 3

