


 

 

 

 
 
 





 

 

 






 







Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+ / Aspect	 Shift + Guide
 Subtitle	 Subt
 Source	 AV
 -[/]- / P.STD	 Shift + Format

Originale	Sostituto
 -[J]- / S.STD	 Shift + Dual
 Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol +	 Vol +
 Vol -	 Vol -
 Program +	 Ch +
 Program -	 Ch -
 Exit	 Exit
 Open / Close	 Eject
 Info	 Info
 Setup / DVD / FAV	 Options
 I/II / Audio	 Dual
 [/≡] / Text	 Text



