



 



 

 

 

 

 





 

 

 













 



 

 



 
 




 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		e		Smart / List
	Resync		Back / Return		Page Down		CH- / Page-
	Source		AV / Input / RDS		1/RGB		1
	Freeze		Pause / Step / Freeze		2/Brightness		2
	Hide		Display / Media		3/Color		3
	Aspect/Ratio		Picture / Format		Contrast		Info / Angle
	Up		Up		4/VGA		4
	PIP		TV/Radio /		5/Component		5
	Left		Left		6/Video		6
	Menu		Menu / Home		S-Video		Guide / EPG / -/-
	Right		Right		7/DVI		7
	Zoom		Zoom / Size		8/HDMI		8
	Down		Down		9/Wireless		9
	Location		Setup / OPT /		0/Mute		0
	Vol+		Vol+				
	Page Up		CH+ / Page+				
	Vol-		Vol-				

