 

 





 




 




 



 



 



 



 



 



 

 

 

 

 



 

 

 

 









 

 



| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-----------------|---|--------------------------|---|------------|---|-----------------------|
|  | M I . X. |  | Pi ctur e / Form at |  | 0 |  | 0 |
|  | V. Out |  | AV / I nput / RDS |  | Repeat |  | Gr een / APP / Repeat |
|  | CLR / A l l CLR |  | Exi t / Cance l / Clea r |  | Audi o |  | Audi o / Lang I / I I |
| | Di sc Up |  | >> / Tune+ |  | Subt itl e |  | Subt itl e / EQ |
| | Di sc Down |  | << / Tune- |  | Angl e |  | I nfo / Angl e |
|  | Fol der - |  | CH - / Page- |  | Di spl ay |  | Di spl ay / Medi a |
|  | Ent . |  | OK |  | Menu |  | Menu / Home |
|  | Pl ay / Pause |  | Pause / Step / Freeze |  | Top Menu |  | D. Menu / Top |
|  | 9 |  | 9 |  | Set up |  | Set up / OPT / |
|  | 1 |  | 1 |  | Li st |  | Sm art / Li st |
|  | 2 |  | 2 |  | Ret ur n |  | Back / Ret ur n |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | Lef t |  | Lef t |
|  | 5 |  | 5 |  | PWR |  | Power |
|  | 6 |  | 6 |  | Ri ght |  | Ri ght |
|  | 7 |  | 7 |  | Down |  | Down |
|  | 8 |  | 8 |  | I << |  | I << / Preset- |





Originale

Sostituto

| | |
|--|--|
|  >> |  >> / Preset + |
|  Play / Pause |  Play / Slow |
|  Stop |  Stop / Hold |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Originale

Sostituto

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

