











 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Home	 Menu / Home
 1	 1	 P-	 CH- / Page-
 2	 2	 *	 D.Menu / Top
 3	 3	 Up	 Up
 4	 4	 i	 Info / Angle
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 EPG	 Guide / EPG / -/--	 Exit	 Exit / Cancel / Clear
 0	 0	 Netflix	 Shift + Red / Netflix /
 TXT	 Text / Goto	 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+	 *1	 Smart / List
 Input	 AV / Input / RDS	 *2	 Display / Media
 P+	 CH+ / Page+	 Red	 Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Home	 Menu / Home
 1	 1	 P-	 CH- / Page-
 2	 2	 *	 D.Menu / Top
 3	 3	 Up	 Up
 4	 4	 i	 Info / Angle
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
8	8	Back	Back / Return
9	9	Down	Down
EPG	Guide / EPG / -/--	Exit	Exit / Cancel / Clear
0	0	Netflix	Shift + Red / Netflix /
TXT	Text / Goto	YouTube	Shift + Yellow / YouTube /
Vol+	Vol+	*1	Smart / List
Input	AV / Input / RDS	*2	Display / Media
P+	CH+ / Page+	Red	Red / Netflix / Search





Originale	Sostituto	Originale	Sostituto
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
<<	<< / Tune-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Audio	Audio / Lang I/II		

