









 

 

 

 



 





 

 

 

 






Originale	Sostituto
 Power	 Power
 Source	 AV
 Tv/Radio	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide
 OPT+	 Options
 Back	 Back
 Last	 Pre Ch

Originale	Sostituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 Mute	 Mute
 i	 Info
 Menu	 Menu
 List	 List



