



Originale	Sostituto
Standby / On	Power
BD	Shift + 5
DVD	Shift + 2
DVR / BDR	Shift + 7
HDMI	Shift + 0
TV	Shift + 1
CD	Shift + 3
NET	Shift + 9
ADPT	Shift + Guide / EPG / -/-
iPod / USB	Shift + 8
SAT / CBL	Shift + Fav / Marker / PC
MHL	Shift + 4
TUNER	Shift + 6
Input Select ↻	CH- / Page-
Input Select ↻	CH+ / Page+
i / Status	Info / Angle
Volume+	Vol+

Originale	Sostituto
Volume-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Up	Up
Video	Picture / Format
Tools Menu	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Home Menu	Menu / Home
iPod Ctrl.	D.Menu / Top
Down	Down
Return	Back / Return
Features PHASE	Red / Netflix / Search
Features ECO	Yellow / YouTube / Repeat
MPX	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze





Originale	Sostituto
BAND	Shift + Play /
Play	Play / Slow
PTY	Shift + Stop /
Stop	Stop / Hold
Preset -	Shift + I<< / Preset-
I<<	I<< / Preset-
Preset+	Shift + >>I / Preset+
>>I	>>I / Preset+
Tune-	Shift + << /
<<	<< / Tune-
Tune+	Shift + >> /
>>	>> / Tune+
Auto / ALC /	Subtitle / EQ
1	1
Standard	Smart / List
2	2
Adv. Surr.	Eject / Surround

Originale	Sostituto
3	3
+ Favorite	Fav / Marker / PC
Audio / THX	Sound / Title
4	4
Signal Sel.	TV/Radio /
MCACC	Zoom / Size
5	5
6	6
CH. Level	Text / Goto
Disp / Auto	Display / Media
7	7
Speakers	Shift + Audio / Lang I/II
Dimmer	Shift + Mute / Dimmer
8	8
9	9
Sleep	Sleep / Timer
Repeat	Green / APP / Repeat






 

 

 







 



 

Originale	Sostituto
Standby / On	Power
BD	Shift + 5
DVD	Shift + 2
DVR / BDR	Shift + 7
HDMI	Shift + 0
TV	Shift + 1
CD	Shift + 3
NET	Shift + 9
ADPT	Shift + Guide / EPG / -/-
iPod / USB	Shift + 8
SAT / CBL	Shift + Fav / Marker / PC
MHL	Shift + 4
TUNER	Shift + 6
Input Select ↻	CH- / Page-
Input Select ↻	CH+ / Page+
i / Status	Info / Angle
Volume+	Vol+

Originale	Sostituto
Volume-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Up	Up
Video	Picture / Format
Tools Menu	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Home Menu	Menu / Home
iPod Ctrl.	D.Menu / Top
Down	Down
Return	Back / Return
Features PHASE	Red / Netflix / Search
Features ECO	Yellow / YouTube / Repeat
MPX	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze





Originale	Sostituto
 BAND	 Shift + Play /
 Play	 Play / Slow
 PTY	 Shift + Stop /
 Stop	 Stop / Hold
 Preset -	 Shift + I<< / Preset-
 I<<	 I<< / Preset-
 Preset+	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 Tune-	 Shift + << /
 <<	 << / Tune-
 Tune+	 Shift + >> /
 >>	 >> / Tune+
 Auto / ALC /	 Subtitle / EQ
 1	 1
 Standard	 Smart / List
 2	 2
 Adv. Surr.	 Eject / Surround

Originale	Sostituto
 3	 3
 + Favorite	 Fav / Marker / PC
 Audio / THX	 Sound / Title
 4	 4
 Signal Sel.	 TV/Radio /
 MCACC	 Zoom / Size
 5	 5
 6	 6
 CH. Level	 Text / Goto
 Disp / Auto	 Display / Media
 7	 7
 Speakers	 Shift + Audio / Lang I/II
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 Repeat	 Green / APP / Repeat



