

 



 





 



 



 



 



 





 









Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 DVD	 Shift + 2
 TUNER	 Shift + 6
 PORT	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Audio	 Audio / Lang I/II
 0	 0

Originale	Sostituto
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-
 Step	 Shift + Pause / Step /
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Tuning+ / CH+	 CH+ / Page+
 Vol-	 Vol-
 Remain	 Yellow / YouTube / Repeat
 Tuning- / CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up





Originale	Sostituto
Return	Back / Return
Left	Left
Enter	OK
Right	Right
Info	Info / Angle
Down	Down
Exit	Exit / Cancel / Clear
Tuner Memory	Blue / Prime Video / Random
Mo / St	Shift + Audio / Lang I/II
Tuner Manual	Smart / List
Tuner Preset	Display / Media
SD / HD	Guide / EPG / -/--
V-H/P / V-Sound	Setup / OPT /
P.Bass	Red / Netflix / Search
Sound Edit	Sound / Title
Logo	Fav / Marker / PC
Dimmer	Shift + Mute / Dimmer

Originale	Sostituto
Slow	Shift + Play /
Repeat	Green / APP / Repeat
Zoom	Zoom / Size
CD Ripping	D.Menu / Top
Cancel	Shift + Exit / Cancel / Clear
Sleep	Sleep / Timer





Originale		Sostituto	
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

Originale		Sostituto	
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down

