



Originale	Sostituto	Originale	Sostituto
Power	Power	Prog+	Ch +
1	1	Prog-	Ch -
2	2	Menu	Menu
3	3	List	List
4	4	Back	Back
5	5	Exit	Exit
6	6	Up	Up
7	7	Left	Left
8	8	OK	Ok
9	9	Right	Right
0	0	Down	Down
EPG	Guide	Red / Timer	Red
Info	Info	Red / Timer	AV
Vol+	Vol +	Green / FAV	Green
Vol-	Vol -	Green / FAV	Pre Ch
Mute	Mute	Yellow / Repeat	Yellow
TV / Radio	TV/R	Blue / Goto	Blue

Originale	Sostituto	Originale	Sostituto
Power	Power	Prog+	Ch +
1	1	Prog-	Ch -
2	2	Menu	Menu
3	3	List	List
4	4	Back	Back
5	5	Exit	Exit
6	6	Up	Up
7	7	Left	Left
8	8	OK	Ok
9	9	Right	Right
0	0	Down	Down
EPG	Guide	Red / Timer	Red
Info	Info	Red / Timer	AV
Vol+	Vol +	Green / FAV	Green
Vol-	Vol -	Green / FAV	Pre Ch
Mute	Mute	Yellow / Repeat	Yellow
TV / Radio	TV/R	Blue / Goto	Blue





Originale	Sostituto	Originale	Sostituto
 Audio	 Dual		
 SUB	 Subt		
 Yellow / Repeat	 Shift + Text		
 Text	 Text		
 File	 Media		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 I<< PREV	 I<<		
 >>I NEXT	 >>I		
 << REW	 <<		
 >> FWD	 >>		

Originale	Sostituto

