




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Media	 Display / Media
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-
 Back	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 TV / Radio	 TV/Radio /
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze





Originale		Sostituto		Originale		Sostituto	
	>>		>> / Tune+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	TXT		Text / Goto				
	SUB		Subtitle / EQ				
	AUD		Audio / Lang I/II				
	HLP		Smart / List				

