

Originale	Sostituto
TV Direct	Smart / List
Power DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power Audio	Power
Power STB	Yellow / YouTube / Repeat
Power TV	Blue / Prime Video / Random
DVD	2
VCR	4
TV	1
FM/AM	6
Tv/Video	5
Muting	Mute / Dimmer
Channel+	CH+ / Page+
Volume+	Vol+
Channel-	CH- / Page-
Volume-	Vol-
Display/On	Display / Media

 
Originale	Sostituto
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
Analog/Digital Input	AV / Input / RDS
Smart S Setup	Setup / OPT /
Bass Boost	Audio / Lang I/II
C. Tone	Subtitle / EQ
A. Position	D.Menu / Top
Test Tone	Text / Goto
Effect	Info / Angle
Decode	TV/Radio /
Surround	Eject / Surround
Subwfr+	Right
Center+	Up
Surr L+	Shift + Vol+
Surr R+	Shift + CH+ /
Subwfr-	Left
Center-	Down



Screen





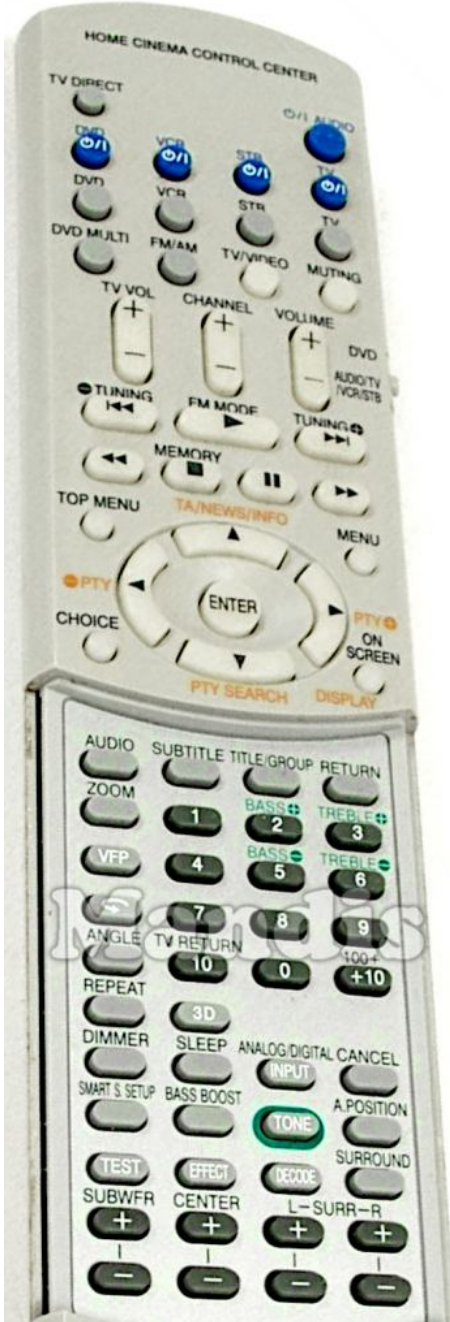 


Originale	Sostituto
Power Audio	Power
Power Tv	SHIFT +  Power
FM/AM	SURROUND Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
Tuning- FM/AM	<< / Tune-
FM Mode FM/AM	Smart / List
Tuning+ FM/AM	>> / Tune+
Memory FM/AM	Menu / Home
TA/News/Info	Info / Angle
TA/News/Info	Up
PTY- FM/AM	Left
PTY+ FM/AM	Right
PTY Search	Down
PTY Search	Red / Netflix / Search

Originale	Sostituto
Display FM/AM	Display / Media
1 FM/AM	SHIFT +  TV 1 Shift + 1
1 TV	TV 1
2 FM/AM	SHIFT +  DVD 2 Shift + 2
2 TV	DVD 2
3 FM/AM	SHIFT +  CD-STB 3 Shift + 3
3 TV	CD-STB 3
4 FM/AM	SHIFT +  VIDEO 4 Shift + 4
4 TV	VIDEO 4
5 FM/AM	SHIFT +  TAPE 5 Shift + 5
5 TV	TAPE 5
6 FM/AM	SHIFT +  TUNER 6 Shift + 6
6 TV	TUNER 6
7 FM/AM	SHIFT +  AUX-HDD 7 Shift + 7
7 TV	AUX-HDD 7
8 FM/AM	SHIFT +  USB 8 Shift + 8
8 TV	USB 8



FM/AM

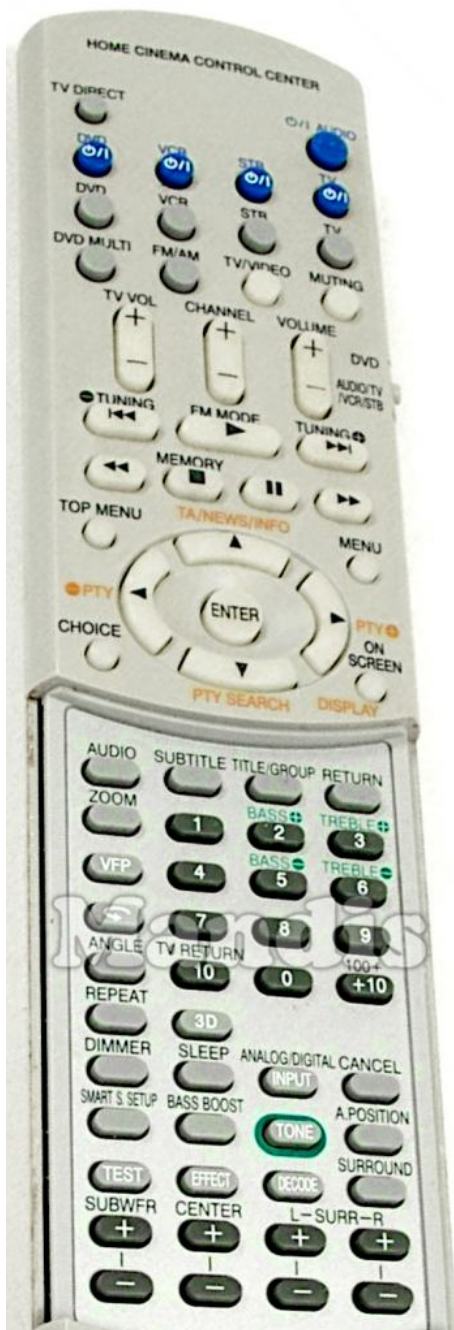 

**Originale**
**Sostituto**

9	9 FM/AM	SHIFT + BLUETOOTH	Shift + 9
9	9 TV	9	9
TV RETURN 10	10 FM/AM	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
TV RETURN 10	10/Tv Return TV	SHIFT + HDMI - SAT	Shift + 0
0	0 TV	HDMI - SAT	0
100+ +10	+10/100+	SHIFT + GUIDE EPG	Shift + Guide / EPG / --
100+ +10	+10 TV	PC FAV MARKER	Fav / Marker / PC

**Originale**
**Sostituto**



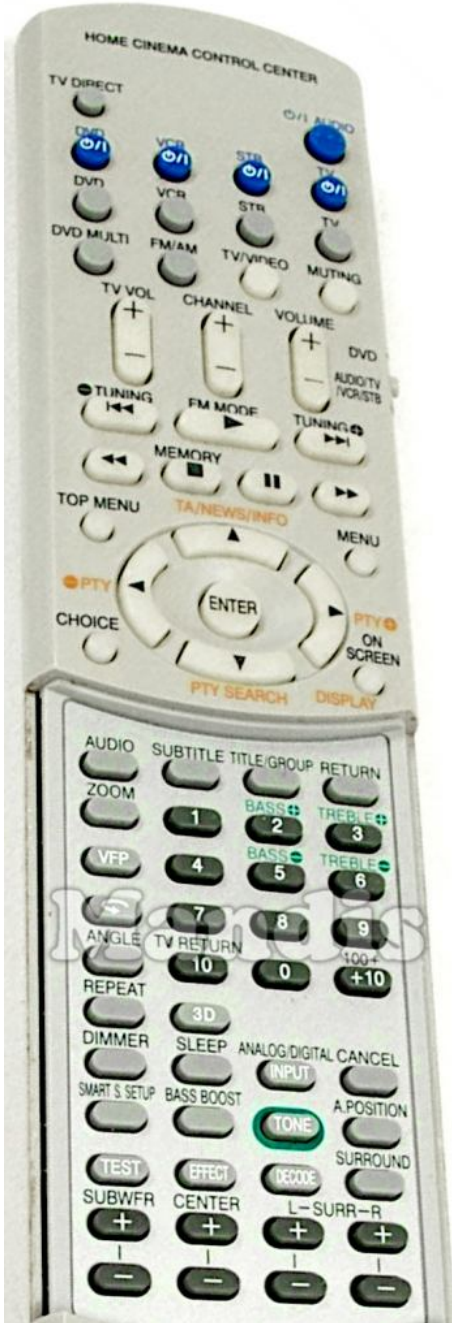 


Originale	Sostituto
Power DVD	Power
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Top Menu	D.Menu / Top
>>	>> / Tune+
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Set Up	Setup / OPT /
Down	Down
On Screen	Shift + Display / Media

Originale	Sostituto
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Title Group	Shift + Sound / Title
Return	Back / Return
DVD Zoom	Zoom / Size
1	1
2	2
3	3
VFP Progressive	Smart / List
4	4
5	5
6	6
←	Left
7	7
8	8
9	9
Angle	Info / Angle



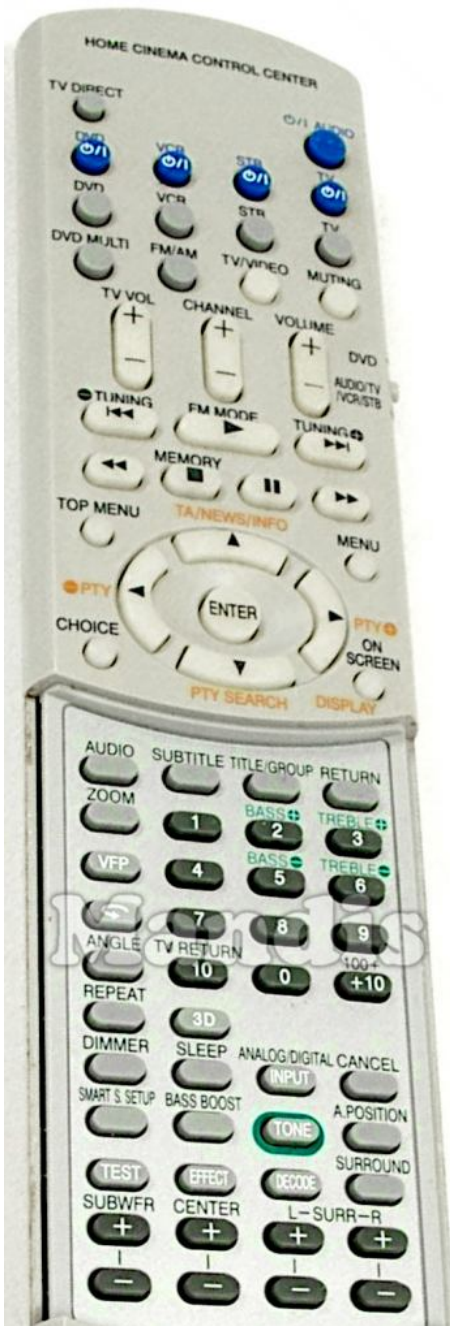 


Originale		Sostituto	
TV RETURN 10	10	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT 0	0
100+ +10	+10	PC FAV MARKER	Fav / Marker / PC
DIMMER	Display/Dimmer	MEDIA DISPLAY	Display / Media
	Input Analog/Digital	RDS AV INPUT	AV / Input / RDS
.CANCEL	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
EFFECT	HDD Sound Effect	TITLE SOUND	Sound / Title
SURROUND	Surround	SURROUND	Eject / Surround

Originale	Sostituto





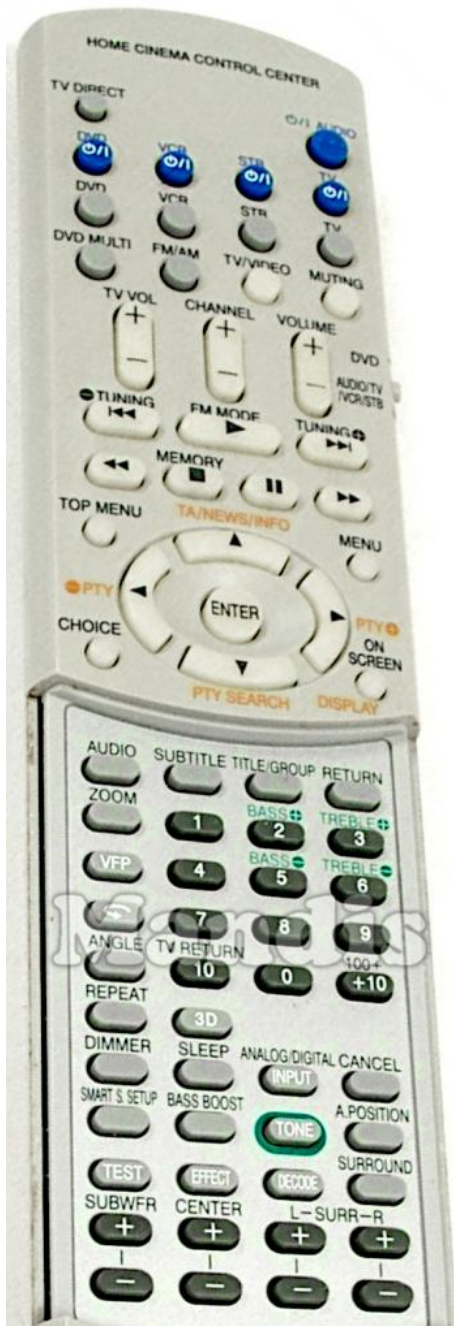

Originale		Sostituto		Originale		Sostituto	
	Power VCR	+	Shift + Power		3 VCR	+	Shift + 3
	Power STB		Power		3 STB		3
	VCR	+	Shift + Guide / EPG / -/-		4 VCR	+	Shift + 4
	Muting		Mute / Dimmer		4 STB		4
	Channel+		CH+ / Page+		5 VCR	+	Shift + 5
	Volume+		Vol+		5 STB		5
	Channel-		CH- / Page-		6 VCR	+	Shift + 6
	Volume-		Vol-		6 STB		6
	Play VCR		Play / Slow		7 VCR	+	Shift + 7
	<< VCR		<< / Tune-		7 STB		7
	Stop/Memory		Stop / Hold		8 VCR	+	Shift + 8
	Pause VCR		Pause / Step / Freeze		8 STB		8
	>> VCR		>> / Tune+		9 VCR	+	Shift + 9
	1 VCR	+	Shift + 1		9 STB		9
	1 STB		1		+10 TV		Guide / EPG / -/-
	2 VCR	+	Shift + 2		0 VCR	+	Shift + 0
	2 STB		2		0 STB		0

