













 


 


 
 







 



 




 
 
 

 
 



 


 
 

 





 



 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [◀▶]	 Format
 0	 0	 → ◻ ←	 TV/R
 Recall	 FAV PRE-CH	 [i+] / [≡i]	 DISPLAY INFO
 Source	 TIMER AV	 Text / [≡] / [≡] [ ]	 REPEAT TEXT
 Menu/DVD	 TOP MENU MENU	 [▢] / [▢] / [▢]	 [▢] Pause
 Guide	 -/-- GUIDE	 [▶] / [▢] / [▢]	 [▶] PLAY MODE
 [■][▢]	 ECO 3D	 [▶] / [▢] / [▢]	 SOUND DUAL




 

 




 


 






 





 


 







 





 


 

 
 
 



 




Originale		Sostituto		Originale	Sostituto
	◀◀ / [≡○]		<<		
	◀◀ / [≡○]	SETTINGS OPT	Options		
SUBTITLE	▶▶ / Subtitle	AD SUBT	Subt		
SUBTITLE	▶▶ / Subtitle	▶▶	>>		
	▲	HOME SMART	Smart		
	■ / [≡□]	■	Stop		
	⏏ / [≡⇕]	ZOOM ▲	Eject		
	⏮ / [≡⇐]	⏮	I<<		
	▶▶ / [○][≡X]	▶▶	>>I		
	▶▶ / [○][≡X]	RETURN BACK	Back		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		














 










 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
  _ Menu/DVD	  Menu	  / [≡□]	 Stop
  - Exit/Back	  Exit	   / [≡⇕]	 Eject
  - Up	  Up	   / [≡⇕]	 I<<<
  Left	  Left	   / [⊙][≡X]	 >>>I
 OK	 OK	   / [⊙][≡X]	 Back




 

 

 

 
 
 

 
 
 

 




 


 



 










 


 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
  _ Menu/DVD	  Menu	  / [≡□]	 Stop
  - Exit/Back	  Exit	   / [≡⇕]	 Eject
  - Up	  Up	   / [≡⇕]	 I<<<
  Left	  Left	   / [⊙][≡X]	 >>>I
 OK	 OK	   / [⊙][≡X]	 Back







Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 P+	 Ch +
 P-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +

Originale	Sostituto
  / 	 Pause
  / 	 Play
  / 	 Dual
  / 	 <<<
  / 	 TV/R
  / Subtitle	 >>>
  / Subtitle	 Subt
 ▲	 Smart
  / 	 Stop
  / 	 Eject
  / 	 I<<<
  /  [=X]	 Back
  /  [=X]	 >>>I

