


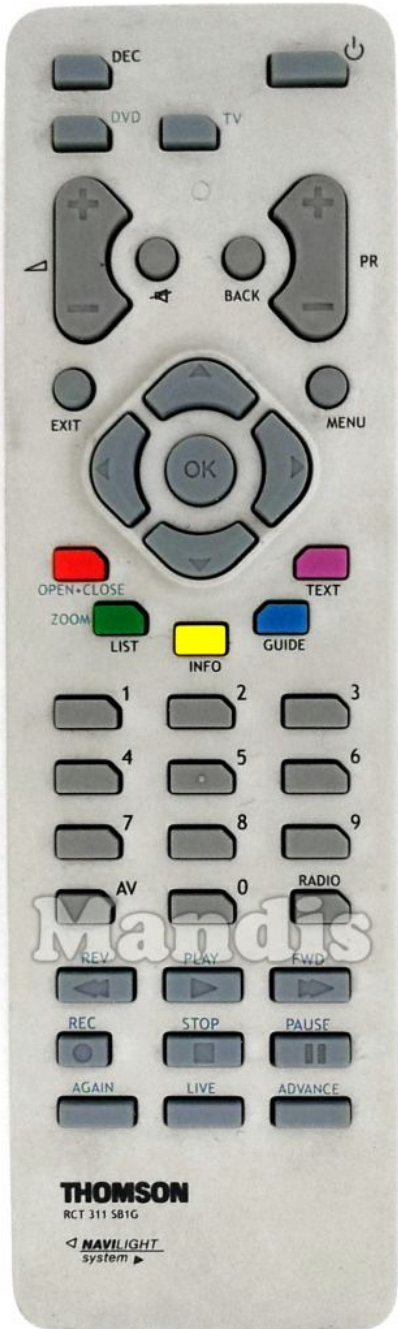






 

 



 
 



 










Originale	Sostituto
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	TV/Radio /
	D.Menu / Top
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Left
	OK
	Right

Originale	Sostituto
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8






Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 TV	 TV/Radio /
 Dec	 D.Menu / Top
 Violet/Text	 Text / Goto
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Live	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Advance	 Display / Media
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



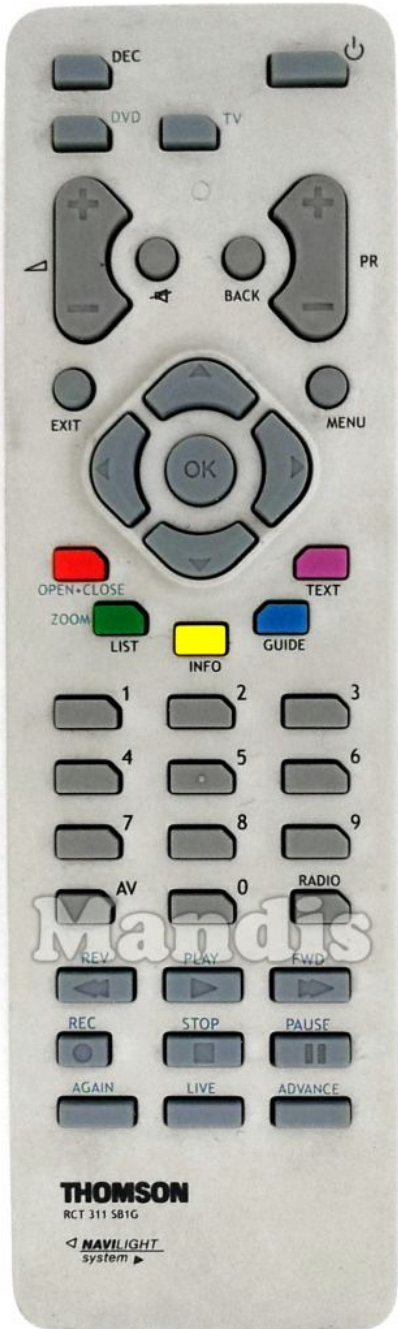

Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
TV	TV/Radio /
Dec	D.Menu / Top
Violet/Text	Text / Goto
AV	AV / Input / RDS
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right

Originale	Sostituto
Exit	Exit / Cancel / Clear
Down	Down
Back	Back / Return
Vol+	Vol+
Live	Smart / List
PR+	CH+ / Page+
Vol-	Vol-
Advance	Display / Media
PR-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8



