


Originale	Sostituto	Originale	Sostituto
Power	Power	Exit	Exit
Mute	Mute	Up / CH+	Up
1	1	Up / CH+	Ch +
2	2	Down / CH-	Down
3	3	Down / CH-	Ch -
4	4	Left	Left
5	5	OK	Ok
6	6	Right	Right
7	7	Vol+	Vol +
8	8	Vol-	Vol -
9	9	ALT / <<	Smart
0	0	ALT / <<	<<
FAV	Pre Ch	List / >>	List
SUB	Subt	List / >>	>>
Menu	Menu	Red / I<< / Lang	Red
EPG	Guide	Red / I<< / Lang	I<<
Info	Info	Red / I<< / Lang	Dual

Originale	Sostituto	Originale	Sostituto
Power	Power	Exit	Exit
Mute	Mute	Up / CH+	Up
1	1	Up / CH+	Ch +
2	2	Down / CH-	Down
3	3	Down / CH-	Ch -
4	4	Left	Left
5	5	OK	Ok
6	6	Right	Right
7	7	Vol+	Vol +
8	8	Vol-	Vol -
9	9	ALT / <<	Smart
0	0	ALT / <<	<<
FAV	Pre Ch	List / >>	List
SUB	Subt	List / >>	>>
Menu	Menu	Red / I<< / Lang	Red
EPG	Guide	Red / I<< / Lang	I<<
Info	Info	Red / I<< / Lang	Dual

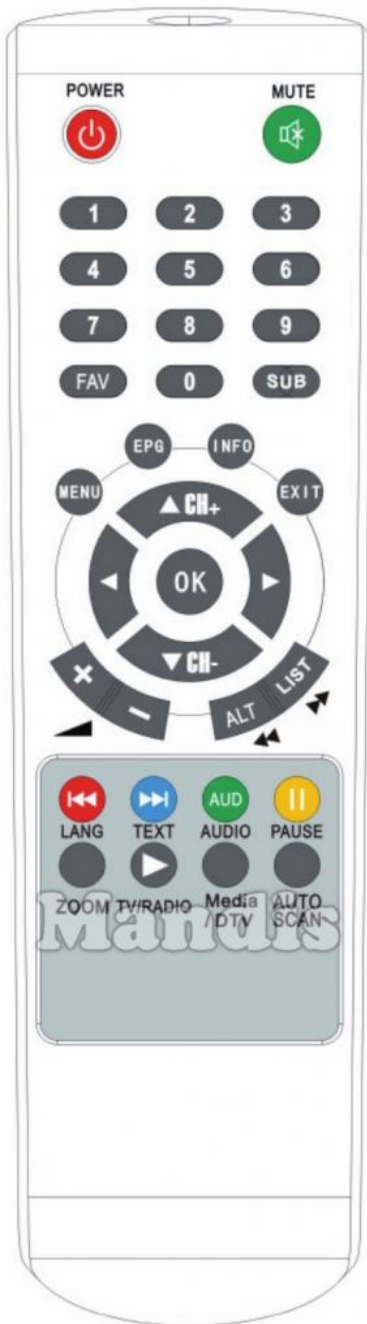



Originale		Sostituto	
	Blue / >>I / Text		Blue
	Blue / >>I / Text		>>I
	Blue / >>I / Text		Text
	Green / Audio		Green
	Green / Audio	 + 	Shift + Dual
	Yellow / Pause		Yellow
	Yellow / Pause		Pause
	Zoom		Eject
	Play / TV/Radio		TV/R
	Play / TV/Radio		Play
	Media / DTV		Media
	Auto Scan		Options

Originale		Sostituto	

