 


 




 
 


 







 


















Originale	Sostituto
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 PRE PR	 Back / Return
 DTV/ATV	 Setup / OPT /
 PR List	 Smart / List
 ECO	 Fav / Marker / PC

Originale	Sostituto
 [i+]	 Info / Angle
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]	 Picture / Format
 PR-	 CH- / Page-
 Dual	 Audio / Lang I/II
 AJD Audio	 Sound / Title
 ADJ Video	 D.Menu / Top
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Originale		Sostituto	
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Teletext		Text / Goto
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Subpage		Eject / Surround
	Index		Display / Media
	Hold		Shift + Stop /
	Reveal		TV/Radio /
	Freeze		Pause / Step / Freeze
	I<<		I<< / Preset-
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	>>I		>>I / Preset+

Originale	Sostituto

