
 
 



 


 
 






 

 
 
 

 

 
 






 




Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Exit	 Exit
Mute	 Mute	Menu Down	 Down
Epg	 +  Shift + Guide	Back	 Back
App	 Media	Volume+	 Vol +
Info	 Info	Audio	 Dual
Subt.List	 Subt	CH/Page+	 Ch +
Video	 Options	Volume-	 Vol -
Sleep Timer	 Sleep	CH/Page-	 Ch -
TV	 TV/R	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Display	 +  Shift + Info	4ghi	 4
Menu	 Menu	5jkl	 5
Menu Up	 Up	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9



Originale	Sostituto	Originale	Sostituto
Guide Pilote	 Guide		
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		

