



Originale		Sostituto		Originale		Sostituto	
	Power		Power		System Menu		Menu
	Theatre		Smart		1		1
	One-Touch Play		Shift + Play		2		2
	Sleep		Sleep		3		3
	S-Air Mode		Red		4		4
	TV Input		AV		5		5
	Picture Navi		Media		6		6
	Dimmer		Shift + Mute		7		7
	Display		Info		8		8
	Function+		Ch +		9		9
	Function-		Ch -		0		0
	Audio		Dual		Clear		Exit
	Subtitle /		Subt		Folder-		Shift + Ch -
	Angle / Memory Select		Format		Folder+		Shift + Ch +
	Sound Mode		Shift + Dual		DVD Menu		D. Menu
	Dynamic Bass		Green		DVD Top Menu		Shift + Menu
	Night		Yellow		Muting		Mute







