












 
 
 
 









 
 




 
 


 
 





 



 

 






 
 



 



 
 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Rec	 Rec
 Home	 Smart	 Stop	 Stop
 1	 1	 Pause	 Pause
 2	 2	 Play	 Play
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Setup	 Options
 6	 6	 I<< Prev	 I<<
 7	 7	 >>I Next	 >>I
 8	 8	 << FR	 <<
 9	 9	 >> FF	 >>
 0	 0	 Up	 Up
 Goto	 List	 Left	 Left
 Mute	 Mute	 Enter	 Ok
 Display	 Info	 Right	 Right
 Audio	 Dual	 Down	 Down
 Subtitle	 Subt	 Browser	 Media





Originale		Sostituto	
	Return		Back
	Red / Slow		Red
	Green / TimeShift		Green
	Yellow / CM Skip		Yellow
	Blue / Replay		Blue
	Repeat		Text
	Zoom		Eject
	Copy		3D
	TV System		TV/R
	Source		AV
	EPG		Guide
	Edit		Format
	Timer		Shift + AV

Originale	Sostituto

