



| Originale | Sostituto |
|---------------|-------------------------------|
| TV Direct | TV/Radio / |
| Power Audio | Audio / Lang I/II |
| Power DVR/DVD | OK |
| Power VCR | + Shift + Power |
| Power STB | Power |
| Power TV | + Shift + OK |
| DVR/DVD | Fav / Marker / PC |
| VCR | + Shift + Guide / EPG / -/- |
| TV | + Shift + TV/Radio / Program |
| FM/AM | Smart / List |
| Video | + Shift + Red / Netflix / |
| Tv/Video | Red / Netflix / Search |
| Muting | Mute / Dimmer |
| Channel+ | CH+ / Page+ |
| Vol+ | Vol+ |
| Channel- | CH- / Page- |
| Vol- | Vol- |

| Originale | Sostituto |
|----------------------|------------------------------|
| Play VCR | Play / Slow |
| << VCR | << / Tune- |
| Stop/Memory | Stop / Hold |
| Pause VCR | Pause / Step / Freeze |
| >> VCR | >> / Tune+ |
| Smart Surround/Setup | Setup / OPT / |
| Display/On | Display / Media |
| 1 VCR | + Shift + 1 |
| 1 STB | 1 |
| AD Input | AV / Input / RDS |
| 2 VCR | + Shift + 2 |
| 2 STB | 2 |
| Decode | + Shift + D.Menu / Top Menu |
| 3 VCR | + Shift + 3 |
| 3 STB | 3 |
| 4 VCR | + Shift + 4 |
| 4 STB | 4 |





| | Originale | Sostituto |
|--------------------|-------------|--|
| BASS BOOST 4 | Bass Boost | SHIFT + LANG III AUDIO Shift + Audio / Lang I/II |
| C.TONE 5 | 5 VCR | SHIFT + TAPE 5 Shift + 5 |
| C.TONE 5 | 5 STB | TAPE 5 5 |
| C.TONE 5 | C. Tone | TITLE SOUND Sound / Title |
| MIDNIGHT 6 | 6 VCR | SHIFT + TUNER 6 Shift + 6 |
| MIDNIGHT 6 | 6 STB | TUNER 6 6 |
| MIDNIGHT 6 | Midnight | SHIFT + LIST SMART Shift + Smart / List |
| 7 | 7 VCR | SHIFT + AUX - HDD 7 Shift + 7 |
| 7 | 7 STB | AUX - HDD 7 7 |
| A.POSITION 8 | 8 VCR | SHIFT + USB 8 Shift + 8 |
| A.POSITION 8 | 8 STB | USB 8 8 |
| A.POSITION 8 | A. Position | YouTube REPEAT A-B Yellow / YouTube / Repeat |
| 9 | 9 VCR | SHIFT + BLUETOOTH 9 Shift + 9 |
| 9 | 9 STB | BLUETOOTH 9 9 |
| SLIDE EFFECT ANGLE | Effect | TOP MENU D.MENU D.Menu / Top |
| 0 | 0 VCR | SHIFT + HDMI - BAT 0 Shift + 0 |
| 0 | 0 STB | HDMI - BAT 0 0 |

| | Originale | Sostituto |
|----------------|----------------|---|
| 100+ +10 | +10 TV | GUIDE EPG Guide / EPG / -/- |
| DIMMER DISPLAY | Display/Dimmer | SHIFT + MEDIA DISPLAY Shift + Display / Media |
| SURROUND | Surround | SURROUND Eject / Surround |
| SLEEP | Sleep | TIMER SLEEP Sleep / Timer |
| REC PAUSE | Rec Pause | REC MODE Rec / Rec Mode |
| L-FRONT | Front L+ | Up |
| FRONT-R | Front R+ | SHIFT + Up |
| CENTER | Center+ | SHIFT + TUNE+ Shift + >> / |
| TEST TONE | Test Tone | GOTO TEXT Text / Goto |
| L-FRONT | Front L- | Down |
| FRONT-R | Front R- | SHIFT + Down |
| CENTER | Center- | SHIFT + TUNE- Shift + << / |
| D.EQ FREQ | D.EQ.Freq | FORMAT PICTURE Picture / Format |
| L-SURR | Surr L+ | SHIFT + Right |
| SURR-R | Surr R+ | Right |
| SUBWFR | Subwfr+ | SHIFT + CH PAGE Shift + CH+ / |
| D.EQ LEVEL | D.EQ.Level+ | SHIFT + VOL Shift + Vol+ |

 




| Originale | Sostituto |
|---------------|-------------------------------|
| Power Audio | + Shift + Power |
| Power Tv | Power |
| FM/AM | Eject / Surround |
| Tv Vol+ | Vol+ |
| Channel+ TV | CH+ / Page+ |
| Tv Vol- | Vol- |
| Channel- TV | CH- / Page- |
| I<</Tuning- | I<< / Preset- |
| FM Mode FM/AM | + Shift + TV/Radio / Program |
| >>I/Tuning+ | >>I / Preset+ |
| Memory FM/AM | + Shift + Smart / List |
| TA/News/Info | Smart / List |
| PTY- FM/AM | TV/Radio / |
| PTY+ FM/AM | Guide / EPG / -/- |
| PTY Search | Red / Netflix / Search |
| Display FM/AM | Display / Media |
| 1 FM/AM | + Shift + 1 |

| Originale | Sostituto |
|-----------|--------------|
| 1 TV | 1 |
| 2 FM/AM | + Shift + 2 |
| 2 TV | 2 |
| 3 FM/AM | + Shift + 3 |
| 3 TV | 3 |
| 4 FM/AM | + Shift + 4 |
| 4 TV | 4 |
| 5 FM/AM | + Shift + 5 |
| 5 TV | 5 |
| 6 FM/AM | + Shift + 6 |
| 6 TV | 6 |
| 7 FM/AM | + Shift + 7 |
| 7 TV | 7 |
| 8 FM/AM | + Shift + 8 |
| 8 TV | 8 |
| 9 FM/AM | + Shift + 9 |
| 9 TV | 9 |




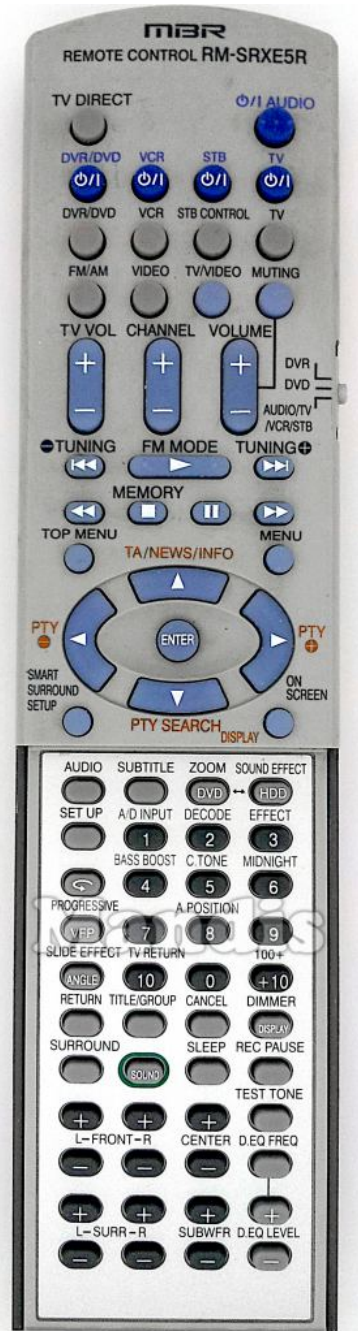

| | Originale | Sostituto | |
|--------------|-----------------|----------------------|---------------------------|
| TV RETURN 10 | 10 FM/AM | SHIFT + FAV MARKER | Shift + Fav / Marker / PC |
| TV RETURN 10 | 10/Tv Return TV | SHIFT + HDMI - BAT 0 | Shift + 0 |
| 0 | 0 TV | HDMI - BAT 0 | 0 |
| 100+ +10 | +10/100+ | SHIFT + GUIDE EPG | Shift + Guide / EPG / -/- |
| 100+ +10 | +10 TV | PC FAV MARKER | Fav / Marker / PC |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |




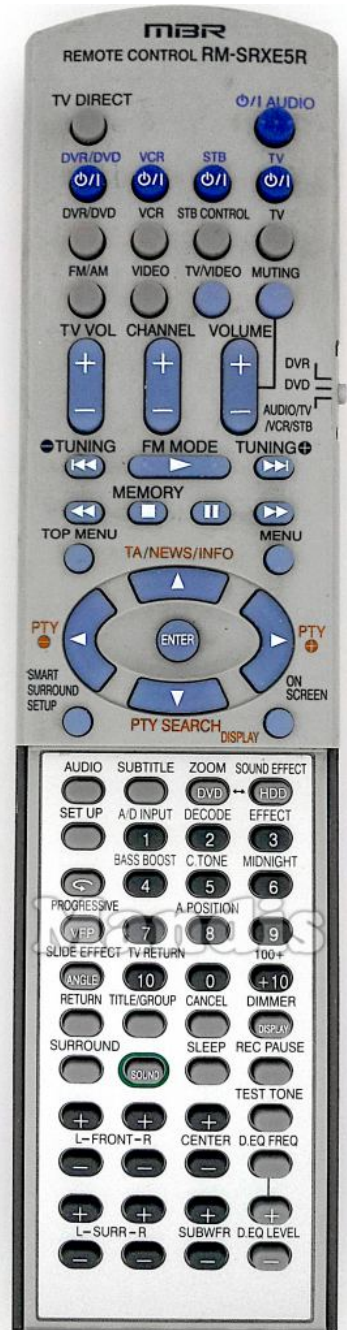 

| Originale | Sostituto |
|-----------|-------------------------|
| Power DVD | Power |
| I<< | I<< / Preset- |
| Play | Play / Slow |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| Stop | Stop / Hold |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Top Menu | D.Menu / Top |
| Up | Up |
| Menu | Menu / Home |
| Left | Shift + Left |
| Enter | OK |
| Right | Right |
| Down | Down |
| On Screen | Shift + Display / Media |
| Audio | Audio / Lang I/II |


| Originale | Sostituto |
|--------------------|-------------------|
| Subtitle | Subtitle / EQ |
| DVD Zoom | Zoom / Size |
| HDD Sound Effect | Sound / Title |
| Set Up | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| ← | Left |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| VFP Progressive | Smart / List |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Angle/Slide Effect | Info / Angle |
| 10 | Guide / EPG / -/- |



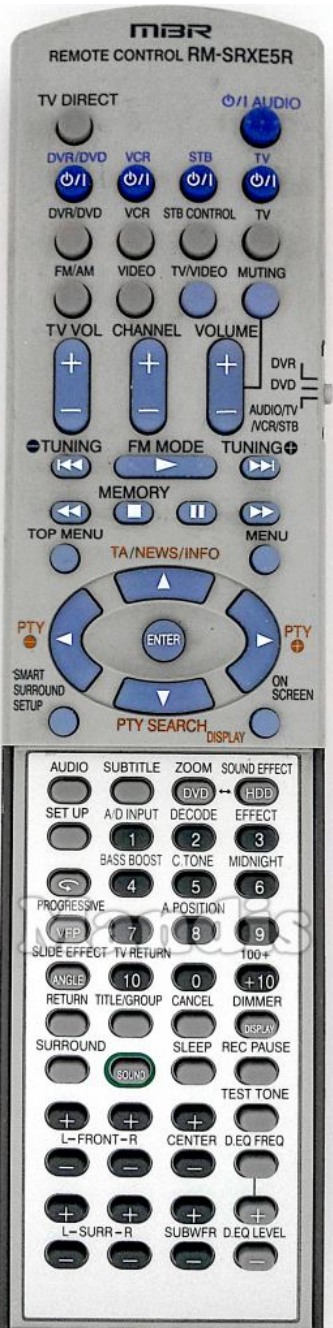 

| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|----------------|-----------|-----------------------|-----------|--|-----------|--|
| | 0 | | 0 | | | | |
| | +10 | | Fav / Marker / PC | | | | |
| | Return | | Back / Return | | | | |
| | Title Group | | Shift + Sound / Title | | | | |
| | Cancel | | Exit / Cancel / Clear | | | | |
| | Display/Dimmer | | Display / Media | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |



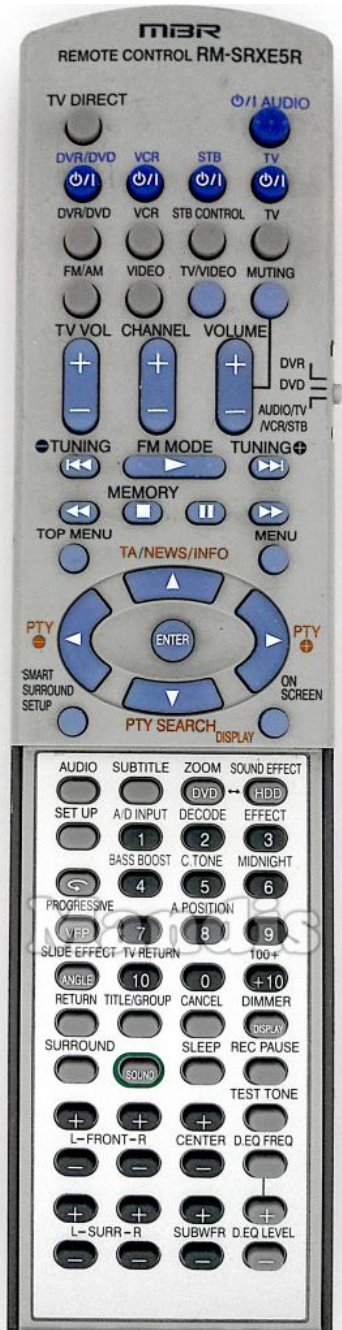 

| Originale | Sostituto |
|-----------|-----------------------|
| Power | Power |
| Channel+ | CH+ / Page+ |
| Channel- | CH- / Page- |
| I<< | I<< / Preset- |
| Play | Play / Slow |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| Stop | Stop / Hold |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Top Menu | D.Menu / Top |
| Up | Up |
| Menu | Menu / Home |
| Left | Shift + Left |
| Enter | OK |
| Right | Right |
| Down | Down |

| Originale | Sostituto |
|------------------|-------------------------|
| On Screen | Shift + Display / Media |
| Audio | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| DVD Zoom | Zoom / Size |
| HDD Sound Effect | Sound / Title |
| Set Up | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| VFP Progressive | Smart / List |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |




Originale
Sostituto

| | | | |
|---|--------------------|---|-----------------------|
|  | Angle/Slide Effect |  | Info / Angle |
|  | 0 |  | 0 |
|  | Return |  | Back / Return |
|  | Cancel |  | Exit / Cancel / Clear |
|  | Display/Dimmer |  | Display / Media |
|  | Rec Pause |  | Rec / Rec Mode |

Originale
Sostituto

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

