









 



























Originale	Sostituto
 Power	 Power
 Eject i Pod	 Exit / Cancel / Clear
 Eject CD	 Eject / Surround
 Sleep	 Sleep / Timer
 Timer / Play	 Zoom / Size
 Clock / Timer	 Shift + Sleep / Timer
 1	 1
 2	 2
 3	 3
 Vol +	 Vol +
 4	 4
 5	 5
 6	 6
 Vol -	 Vol -
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 Del	 Back / Return
 0	 0
 +10	 Guide / EPG / - / - / -
 Mute	 Mute / Dimmer
 Program	 Shift + TV/Radio / Program
 Repeat	 Green / APP / Repeat
 Play Mode	 Smart / List
 Radio	 TV/Radio /
 Play/Pause CD	 Play / Slow
 AUX	 Shift + 7
 << / Tune-	 << / Tune-
 Play/Pause i Pod	 Pause / Step / Freeze
 >> / Tune+	 >> / Tune+
 Re-Master	 D. Menu / Top
 Stop	 Stop / Hold
 D. Bass	 Audio / Lang I/II
 i Pod Menu	 Menu / Home





Originale	Sostituto
Preset EQ	Subtitle / EQ
Up	Up
Bass/Treble	Sound / Title
Left	Left
OK	OK
Right	Right
Display/Dimmer	Shift + Mute / Dimmer
Display/Dimmer	Display / Media
Down	Down
Surround	Shift + Eject / Surround
Auto Off	Shift + Power
Tune Mode	Text / Goto
FM Mode	Setup / OPT /
Input Level	AV / Input / RDS

Originale	Sostituto

