


 
 






Originale	Sostituto
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Internet Radio Preset 1	 Shift + 1
 Internet Radio Preset 2	 Shift + 2
 Internet Radio Preset 3	 Shift + 3
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<


Originale	Sostituto
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1







Originale	Sostituto
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -

Originale	Sostituto
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4



