


 
 








Originale	Sostituto
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Internet Radio Preset 1	 Shift + 1
 Internet Radio Preset 2	 Shift + 2
 Internet Radio Preset 3	 Shift + 3
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<

Originale	Sostituto
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1



 
 




 
 

 

 



Originale	Sostituto
Power	Power
Power AMP	+ Shift + Power
CD	Red
Recorder	Green
Network	Yellow
Phono	Blue
AUX	Smart
Tuner	Media
Play	Play
Pause	Pause
I<<	I<<
>>I	>>I
Stop	Stop
<<	<<
>>	>>
Preset+	Ch +
Preset-	Ch -

Originale	Sostituto
Pure Direct/Favorite	Pre Ch
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Info	Info
Mode	Format
Source	AV
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
1	1
2	2
3	3
4	4





Originale		Sostituto		Originale		Sostituto	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Options				
	Repeat		Text				
	Search/Program		Sleep				
	Dimmer		Dual				

