



Originale	Sostituto
Power	Power
Open/Close	Eject / Surround
On Screen	Display / Media
1	1
Repeat	Green / APP / Repeat
2	2
Program	TV/Radio /
3	3
Sleep	Sleep / Timer
Surround	Shift + Eject / Surround
4	4
Sound	Sound / Title
5	5
Zoom	Zoom / Size
6	6
Aspect	Shift + Picture / Format
7	7

Originale	Sostituto
8	8
9	9
0	0
Source	AV / Input / RDS
Color Mode	Picture / Format
Break	Text / Goto
Play	Play / Slow
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left





Originale	Sostituto
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Keystone Up	CH+ / Page+
Visual Setup	Fav / Marker / PC
Vol+	Vol+
Keystone Down	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
O)))/Audio	Audio / Lang I/II
[...] / Subtitle	Subtitle / EQ
Camera/Angle	Info / Angle
Image On/Off	Smart / List

Originale	Sostituto

