







































Originale	Sostituto
Power	Power
OSD	Display / Media
Open / Close	Eject / Surround
N/P	Picture / Format
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
RAN	Smart / List
L/R	D.Menu / Top
Slow	Shift + Play /
Resume	Shift + Right
Step	Shift + Pause / Step /
Key+	CH+ / Page+
Return	Back / Return
3D	Shift + 3
Vol+	Vol+
Key-	CH- / Page-
Time	Sleep / Timer

Originale	Sostituto
PDVD	AV / Input / RDS
Vol-	Vol-
Language	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Prog	TV/Radio /
Setup	Setup / OPT /
Up	Up
Title	Sound / Title
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Zoom	Zoom / Size
Play	Play / Slow
Pause	Pause / Step / Freeze





Originale	Sostituto
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 I<< Prev	 I<< / Preset-
 4	 4
 5	 5
 6	 6
 >>I Next	 >>I / Preset+
 7	 7
 8	 8
 9	 9
 << REV	 << / Tune-
 10/0	 0
 10+	 Guide / EPG / -/--
 Clear	 Exit / Cancel / Clear

Originale	Sostituto
 >> FWD	 >> / Tune+

