 


 
 

 

 
 
 




 
 
 

 
 

 

 

 
 
 
 








Originale	Sostituto
 Power	 Power
 Input TV	 TV/R
 Input Av	 AV
 Aspect	 Format
 Viera Link	 Smart
 Option	 Options
 Direct TV Rec	 Rec
 Guide	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Return	 Back
 Red	 Red

Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 STTL	 Subt
 Index	 Media
 Hold	 +  Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0



 



 

 





 











Originale	Sostituto	Originale	Sostituto
 Power DVD	 Power		
 Rec DVD	 Rec		
 Programme Down	 Ch -		
 Programme Up	 Ch +		
 I<< DVD	 I<<		
 << DVD	 <<		
 >>I DVD	 >>I		
 >> DVD	 >>		
 Stop DVD	 Stop		
 Pause/Step DVD	 Pause		
 Play DVD	 Play		

Originale	Sostituto	Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	VCR Power		Power				
	VCR Rec		Rec				
	VCR		Ch -				
	VCR		Ch +				
	VCR << / I<<		<<				
	VCR << / I<<		I<<				
	VCR >> / >>I		>>				
	VCR >> / >>I		>>I				
	VCR Stop		Stop				
	VCR Pause / Step		Pause				
	VCR Play		Play				

