


 

 

 


 

 

 
 
 

 

 
 
 
 

 

 









 
 


 

 
 

 
 
 
 
 
 

 
 
 

 
 


 
 




	Originale	Sostituto	Originale	Sostituto
	Power			Angle/TTX
	Goto			Audio
	Mute			PBC/Scan
	Source			Title
	1			Stop
	2			Play
	3			Pause
	4			Mode
	5			Setup
	6			Up
	7			Down
	8			Right
	9			Left
	0			Enter
	10+			Yellow/Zoom
	Step			Red/Menu
	Subtitle			Green
				Text
				Dual
				Media
				3D
				Play
				Format
				Options
				Up
				Down
				Right
				Left
				Ok
				Yellow
				Red
				Green





Originale	Sostituto
 Blue	 Blue
 I<<	 I<<
 >>I	 >>I
 TV/Radio	 TV/R
 Repeat/Del	 Shift + Text
 Pro/EPG	 Guide
 Display	 Info
 <</FAV	 <<
 >>/Prot	 >>

Originale	Sostituto

