
















 











 



 



 



 


 







 

 
 






 



















Originale		Sostituto		Originale		Sostituto	
	Power		Power		4		4
	VIDEO		Red / Netflix / Search		5		5
	Sleep		Sleep / Timer		6		6
	Tuner Band		TV/Radio /		7		7
	P.Call Down		Shift + Down		8		8
	P.Call Up		Shift + Up		9		9
	Changer CD 1		Shift + 1		0		0
	Changer CD 2		Shift + 2		+10		Guide / EPG / -/-
	Changer CD 3		Shift + 7		I<<		I<< / Preset-
	Changer CD 4		Shift + 4		>>I		>>I / Preset+
	Changer CD 5		Shift + 8		Stop		Stop / Hold
	Changer CD 6		Shift + 9		Play/Pause		Play / Slow
	P		OK		Repeat		Green / APP / Repeat
	P.Open/Close		Eject / Surround		Clear		Exit / Cancel / Clear
	1		1		Check		Shift + OK
	2		2		Edit		Text / Goto
	3		3		P.Mode		Picture / Format












Originale	Sostituto
 AI Auto Focus	 Info / Angle
 Up	 Up
Presence	 Setup / OPT /
 AI/Loudness	 Audio / Lang I/II
Left	 Left
EQ.Effect	 D.Menu / Top
Right	 Right
 Off	 Shift + Mute / Dimmer
 M.Call	 Back / Return
 Down	 Down
 Display	 Display / Media
 S.W.Power	 Shift + Power
 S.W.Effect	 Shift + D.Menu / Top Menu
 S.W.Vol-	 Shift + Vol-
 S.W.Vol+	 Shift + Vol+
 Mute	 Mute / Dimmer
 LD/AUX	 AV / Input / RDS

Originale	Sostituto
 Tape	 Shift + 5
 Tuner	 Shift + 6
 CD	 Shift + 3
 Volume Control -	 Vol-
 Volume Control +	 Vol+


















 


Originale	Sostituto
Power ON/Off	 Power
Mute	 Mute / Dimmer
CD Play	 Play / Slow
CD Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
CD Rewind	 << / Tune-
CD F.FWD	 >> / Tune+
Prev./Prog-	 << / Preset-
Next/Prog+	 >> / Preset+
Tape 2 Pre./eq	 Subtitle / EQ
Fm Mode/Disc	 Eject / Surround
Edit	 Zoom / Size
Sleep	 Sleep / Timer
Program	 TV/Radio /
Every Pop	 D.Menu / Top
Funct./Direct	 Setup / OPT /
Woofers/Speed	 Text / Goto

Originale	Sostituto
Input/Source	 AV / Input / RDS
Mode	 Menu / Home
Tape 1 Preset	 Up
CD/Theater	 Info / Angle
Tape 1 Hall/Ats	 Left
Center	 OK
Tape 2 REC./Jazz	 Right
Clear	 Exit / Cancel / Clear
Preset Pause	 Down
Volume+	 Vol+
Band	 Smart / List
Vol Rs+/S.Mode	 CH+ / Page+
Volume-	 Vol-
Display	 Display / Media
Vol Rs-/Effect	 CH- / Page-
Pr 1	 1
Pr 2	 2





Originale	Sostituto	Originale	Sostituto
Pr 3	 3		
Pr 4	 4		
Pr 5	 5		
Pr 6	 6		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
+10/Next Sv+V	 Guide / EPG / -/--		
Pr 0/10	 0		
Repeat	 Green / APP / Repeat		
CD Random	 Blue / Prime Video / Random		
Tape 1 Play	 Shift + Play /		
Tape 1 Stop	 Shift + Stop /		
Tape 1 Rec	 Shift + Rec / Rec Mode		
Tape 1 Rew	 Shift + << /		
Tape 1 F.FWD	 Shift + >> /		

