







 



 




Originale	Sostituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Down / P-	 Down
 Down / P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 --	 Guide / EPG / -/--
 0	 0
 P < P	 Fav / Marker / PC
 PP	 Back / Return
 Vol+	 Vol+
 I-II	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [TV]	 Shift + 1
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS
 [≡]	 Text / Goto













 





 







 
 
 

 



 



 

 



 







 

 





 



 







	Originale	Sostituto	Originale	Sostituto
	[≡⊕]	Subtitle / EQ		
	[/ ≡]	Picture / Format		
	[≡X]	Exit / Cancel / Clear		
	[≡↓]	Zoom / Size		
	[≡?]	Display / Media		
	[≡i]	Smart / List		





Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Up / P+		Up		+10		Guide / EPG / -/-
	Up / P+		CH+ / Page+		0		0
	Menu		Menu / Home		Repeat		Green / APP / Repeat
	Left		Left		Search		Red / Netflix / Search
	Select		OK		A→B		Yellow / YouTube / Repeat
	Right		Right		Display		Display / Media
	Down / P-		CH- / Page-		Audio		Audio / Lang I/II
	Down / P-		Down		Subtitle		Subtitle / EQ
	1		1		Zoom		Zoom / Size
	2		2		Prog		TV/Radio /
	3		3		C		Blue / Prime Video / Random
	4		4		Angle		Info / Angle
	5		5		Return		Back / Return
	6		6		Time		Sleep / Timer
	7		7		<<		<< / Tune-
	8		8		>>		>> / Tune+





































 



























Originale	Sostituto	Originale	Sostituto
	 I<< / Preset-		
	 >>I / Preset+		
	 Play / Slow		
	 Pause / Step / Freeze		
	 Stop / Hold		
	 Sound / Title		
	 Eject / Surround		





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Originale	Sostituto	Originale	Sostituto
Menu Right	 Right	1	 1
Menu Down	 Down	2	 2
Back	 Back / Return	3	 3
Volume+	 Vol+	4	 4
Chan.Up	 CH+ / Page+	5	 5
Volume-	 Vol-	6	 6
Display	 Display / Media	7	 7
Chan.Down	 CH- / Page-	8	 8
1	 1	9	 9
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		





Originale	Sostituto	Originale	Sostituto
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Shift + Audio / Lang I/II		

Originale	Sostituto

