











 





 







 
 
 

 



 



 

 



 







 

 





 



 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		--		Guide / EPG / -/--
	Up / P+		Up		0		0
	Up / P+		CH+ / Page+		P < P		Fav / Marker / PC
	Menu		Menu / Home		PP		Back / Return
	Left		Left		Vol+		Vol+
	Right		Right		I-II		Audio / Lang I/II
	Down / P-		Down		Mute		Mute / Dimmer
	Down / P-		CH- / Page-		Vol-		Vol-
	1		1		Info		Info / Angle
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		[TV]		Shift + 1
	7		7		[TV]		TV/Radio /
	8		8		[AV]		AV / Input / RDS
	9		9		[≡]		Text / Goto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Up / P+		Up		+10		Guide / EPG / -/-
	Up / P+		CH+ / Page+		0		0
	Menu		Menu / Home		Repeat		Green / APP / Repeat
	Left		Left		Search		Red / Netflix / Search
	Select		OK		A→B		Yellow / YouTube / Repeat
	Right		Right		Display		Display / Media
	Down / P-		CH- / Page-		Audio		Audio / Lang I/II
	Down / P-		Down		Subtitle		Subtitle / EQ
	1		1		Zoom		Zoom / Size
	2		2		Prog		TV/Radio /
	3		3		C		Blue / Prime Video / Random
	4		4		Angle		Info / Angle
	5		5		Return		Back / Return
	6		6		Time		Sleep / Timer
	7		7		<<		<< / Tune-
	8		8		>>		>> / Tune+

































































Originale	Sostituto	Originale	Sostituto
	⏪		I<< / Preset-
	⏩		>>I / Preset+
	▶/		Play / Slow
	⏸		Pause / Step / Freeze
	■		Stop / Hold
	Title		Sound / Title
	Open / Close		Eject / Surround





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Originale	Sostituto	Originale	Sostituto
Menu Right	 Right	1	 1
Menu Down	 Down	2	 2
Back	 Back / Return	3	 3
Volume+	 Vol+	4	 4
Chan.Up	 CH+ / Page+	5	 5
Volume-	 Vol-	6	 6
Display	 Display / Media	7	 7
Chan.Down	 CH- / Page-	8	 8
1	 1	9	 9
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		





Originale	Sostituto	Originale	Sostituto
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Shift + Audio / Lang I/II		

Originale	Sostituto

