



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Yellow/Zoom	 Yellow
 Mute	 Mute	 Blue/Option	 Blue
 Rec	 Rec	 Info	 Info
 Goto	 Smart	 FAV	 Pre Ch
 Aspect	 3D	 Menu	 Menu
 V.Format	 Format	 Exit	 Exit
 <<	 <<	 Up/CH+	 Up
 >>	 >>	 Down/CH-	 Down
 Play	 Play	 Right/Vol+	 Right
 Pause	 Pause	 Left/Vol-	 Left
 Stop	 Stop	 OK	 Ok
 Tv/Radio	 TV/R	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Dev	 Options	 SAT	 Media
 Recall	 Back	 EPG	 Guide
 Red/TTX	 Red	 Page+	 Ch +
 Green/SUB.T	 Green	 Page-	 Ch -

Originale	Sostituto
 TV	 AUX
 DVD	 REC MODE
 SAT	 PLAY MODE
 AUX	 STOP
 PLAY MODE	 LEFT
 STOP	 RIGHT
 LEFT	 DISC NAV
 RIGHT	 SOUND
 DISC NAV	 AD
 SOUND	 SETTINGS
 AD	 LIST
 SETTINGS	 DUAL
 LIST	 SUBT
 DUAL	 OPT
 SUBT	 PROG
 OPT	 SEARCH
 PROG	 PICTURE
 SEARCH	 ECO
 PICTURE	 SLEEP
 ECO	 TV/R
 SLEEP	 FORMAT
 TV/R	 3D
 FORMAT	 E-MANUAL
 3D	 REPEAT
 E-MANUAL	 ZOOM
 REPEAT	 TIMER
 ZOOM	 D.MENU
 TIMER	 TEXT
 D.MENU	 AV
 TEXT	 TOP MENU
 AV	 INFO
 TOP MENU	 OK
 INFO	 LEFT
 OK	 RIGHT
 LEFT	 CLEAR
 RIGHT	 EXIT
 CLEAR	 RETURN
 EXIT	 BACK
 RETURN	 HOME
 BACK	 SMART
 HOME	 APP
 SMART	 MEDIA
 APP	 VOL+
 MEDIA	 VOL-
 VOL+	 1
 VOL-	 2
 1	 3
 2	 4
 3	 5
 4	 6
 5	 7
 6	 8
 7	 9
 8	 GUIDE
 9	 0
 GUIDE	 FAV
 0	 PRE-CH
 FAV	 A
 PRE-CH	 B
 A	 C
 B	 D
 C	 Mandis SHOP
 D	 www.mandis.tv



