


 









 

 
 
 


 
 

 

 



 

 

 

 

 





 

 

 




 


 





 
 
 


 
 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Rec List		List
	DTV/VCR		AV		Favorite		Pre Ch
	Mute		Mute		Game		Smart
	Info		Info		Recall		Back
	Play		Play		1		1
	Pause		Pause		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	CH+		Ch +		5		5
	CH-		Ch -		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0
	OK		Ok		Tv/Radio		TV/R
	Vol+		Vol +		Audio		Dual
	Vol-		Vol -		Subtitle		Subt





Originale	Sostituto	Originale	Sostituto
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Record	 Rec		
 Stop	 Stop		
 <<	 <<		
 >>	 >>		

