



 







 










 







 
 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Jump	 Back
 -/--	 Shift + Guide
 S.Mode	 Shift + Dual
 I-II	 Dual
 P.Mode	 Format

Originale	Sostituto
 Guide	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Input	 AV
 Menu	 Menu
 Fav. CH	 Pre Ch
 Vol. +	 Vol +
 Vol.-	 Vol -
 CH. +	 Ch +
 CH.-	 Ch -
 Rec	 Rec
 DTV / Radio	 TV/R
 Sleep	 Sleep



