



| Originale | Sostituto |
|---------------|-----------------------------|
| Power | Power |
| e | Page Vol - / Page - |
| Aspect Ratio | Aspect Eco / Aspect |
| Freeze | Timer Freeze / Timer |
| Hide | Invert 3D / Invert |
| Zoom | Play + / Play |
| ReSync | Info Help / Info |
| Source | Source |
| Keystone Up | Shift + Up |
| Up | Up |
| Keystone Down | Shift + Down |
| Down | Down |
| Left | Left |
| Right | Right |
| Menu | Menu |
| Menu | Enter |
| 1 | Shift + Page Vol + / Page + |

| Originale | Sostituto |
|-----------|------------------------------|
| 2 | Shift + Play + / Play |
| 3 | Shift + Focus Volt / Focus |
| 4 | Shift + Page Vol - / Page - |
| 5 | Shift + Stop - / Stop |
| 6 | Shift + Info Help / |
| 7 | Shift + Aspect Eco / Aspect |
| 8 | Shift + Invert 3D / |
| 9 | Shift + Mute Blank / Mute |
| 0 | Shift + Timer Freeze / Timer |
| 4 | Shift + Mode |
| 5 | Video Comp / Video |
| 6 | Shift + Video Comp / Video |
| 7 | Shift + Auto |
| 8 | Mode |
| 9 | Auto |
| 0 | Mute Blank / Mute |

