

 










 

 







 




 





 

 

 
 

 











Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Exit	 Exit / Cancel / Clear
 1	 1	 ?	 D.Menu / Top
 2	 2	 @	 Smart / List
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Back	 Back / Return
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Tools	 Setup / OPT /
 FAV	 Fav / Marker / PC	 Down	 Down
 0	 0	 Guide	 Guide / EPG / -/--
 TXT	 Text / Goto	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Source	 AV / Input / RDS
 Green	 Green / APP / Repeat	 P+	 CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue	 Blue / Prime Video / Random	 Mute	 Mute / Dimmer





Originale		Sostituto		Originale		Sostituto	
	P-		CH- / Page-				
	<		<< / Preset-				
	>		>>  / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	3D		Picture / Format				
	..O		Zoom / Size				
	[...]..		Subtitle / EQ				
	Netflix		Shift + Red / Netflix /				
	My Media		Display / Media				

