



Originale	Sostituto
 Power	 Power
 DVB	 Media
 Prog+	 Shift + Ch +
 Prog-	 Shift + Ch -
 System	 Smart
 Nicam/A2	 List
 DVB Menu	 D. Menu
 TV Format	 Format
 Exit	 Shift + Exit
 Info	 Info
 Language	 Dual
 Text	 Shift + Text
 FAV	 Pre Ch
 EPG	 Guide
 Red / TV/Radio	 Red
 Green / Audio	 Green
 Yellow / Freeze	 Yellow

Originale	Sostituto
 Blue / Subtitle	 Blue
 Blue / Subtitle	 Subt
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 TV-Menu	 Menu
 TV-Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 TV/AV	 AV
 Display	 Shift + Info
 1	 1
 2	 2





Originale	Sostituto	Originale	Sostituto
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Picture		Shift + Format
	Sound		Shift + Dual
	Mute		Mute
	Freeze		Pause
	Sleep		Sleep
	TV/TXT		Text
	Hold		Stop

Originale	Sostituto	Originale	Sostituto
	Reveal		Options
	Cancel		Shift + Back
	Size		Eject
	Subpage		Shift + Subt
	Index		Shift + Smart

