



Originale	Sostituto
Power DVD	Power
Display	Info
SYS Video	Back
On/Off PBC	Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide
Title	Pre Ch
Repeat	Text

Originale	Sostituto
A-B/Repeat	Options
Clear	Exit
FTS/Program	Sleep
Menu System	Menu
Menu Disc	D. Menu
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Stop/Return	Stop
Play	Play
Pause	Pause
>>	>>
<<	<<
>	>>
<	<<





Originale	Sostituto
FWD Slow	Ch +
REV Slow	Ch -
Subtitle	Subt
Angle	Format
Zoom	Eject
Audio	Dual
Search	TV/R
Preview	Green
Mode Sound	Yellow
3D Sound	3D
Power Speakers	Shift + Power
1-2-3 Input	AV
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Bass+	Shift + Up
Bass-	Shift + Down

Originale	Sostituto
Treble+	Shift + Ch +
Treble-	Shift + Ch -

