



 





 
















 








Originale	Sostituto
 Sleep	 Sleep / Timer
 Power	 Power
 Source	 AV / Input / RDS
 I-II	 Audio / Lang I/II
 I.S.	 Smart / List
 [i+]	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Smart Audio	 Sound / Title
 0	 0

Originale	Sostituto
 Smart Picture	 Picture / Format
 Menu	 Menu / Home
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [X]	 Exit / Cancel / Clear





Originale Sostituto

	[↓] / ⊕	 ZOOM	Zoom / Size
	[[]]	 HOLD	Stop / Hold
	[≡]	 GOTO TEXT	Text / Goto
	[/≡]	 SHIFT +  GOTO TEXT	Shift + Text /
	[?]	 TOP MENU D.MENU	D.Menu / Top
	[≡i]	 MEDIA DISPLAY	Display / Media

Originale Sostituto

