















 

 
 
 



 

 



 







 





 

 

 




 

 

 




 









Originale		Sostituto		Originale		Sostituto	
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Power		Power		TV		TV/Radio /
	1		1		Up		Up
	2		2		Menu		Menu / Home
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		[≡] / Text		Text / Goto
	7		7		Down		Down
	8		8		Back		Back / Return
	9		9		P+		CH+ / Page+
	i		Info / Angle		Vol +		Vol+
	0		0		P-		CH- / Page-
	AV		AV / Input / RDS		Vol-		Vol-
	Red		Red / Netflix / Search		^ / Hold		Shift + Stop /
	Green		Green / APP / Repeat		<< / F.T/L		<< / Tune-
	Yellow		Yellow / YouTube / Repeat		Play / [?]		Play / Slow



