








 
 
 

 


 
 

 

 


 
 
 
 


 

 
 


 



 






 



 


 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		PIP		Guide
	AV		AV		TINT		3D
	Aux		Shift + AV		*		Options
	Mute		Mute		○		Shift + Options
	1		1		○i		Subt
	2		2		Fa		Dual
	3		3		Sol		Shift + Dual
	4		4		←•→		Shift + Smart
	5		5		i		Info
	6		6		Text		Text
	7		7		TV		TV/R
	8		8		Up / P+		Up
	9		9		Up / P+		Ch +
	0		0		Down / P-		Down
	P/C / B-R		Pre Ch		Down / P-		Ch -
	HIFI M+1		Smart		Right / Vol+		Right
	•\•		Media		Right / Vol+		Vol +





Originale		Sostituto		Originale	Sostituto
	Left / Vol-		Left		
	Left / Vol-		Vol -		
	OK		Ok		
	Reveal		Menu		
	Sleep		Sleep		
	Text Cancel		Exit		
	+1 Input		Shift + Media		
	Mix		Shift + Text		
	Red / Text Size		Red		
	Green / Exit		Green		
	Yellow / Stop / PC-		Yellow		
	Blue / 0100 / PC+		Blue		

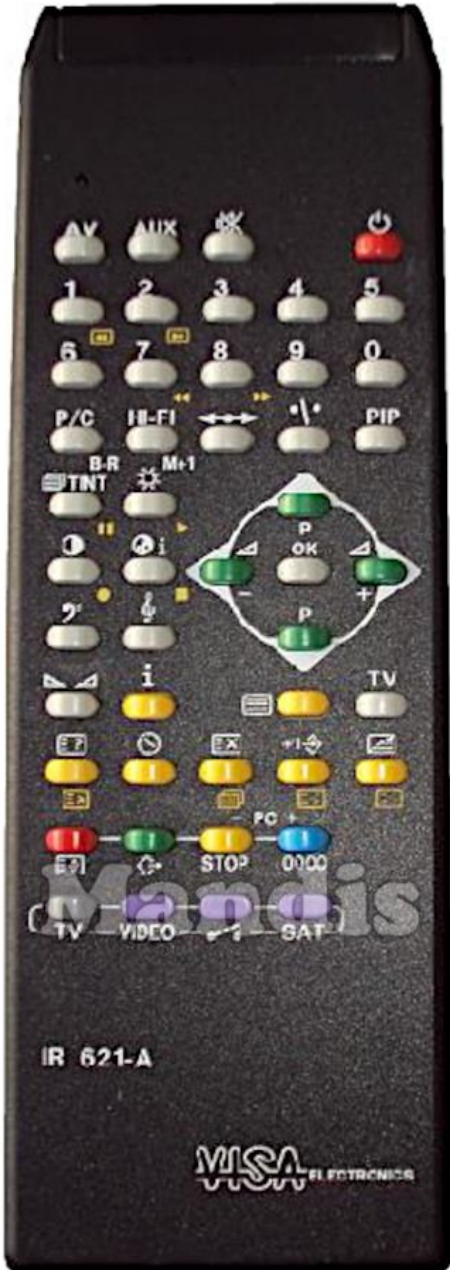