



Originale	Sostituto
Power	Power
Eject	Eject / Surround
Mute	Mute / Dimmer
P.Mode	Picture / Format
S.Mode	Sound / Title
Nicam	Audio / Lang I/II
Aspect	Shift + Picture / Format
1	1
2	2
3	3
Red	Red / Netflix / Search
4	4
5	5
6	6
Green / Goto	Shift + Text /
Green / Goto	Green / APP / Repeat
7	7

Originale	Sostituto
8	8
9	9
Yellow / Angle	Shift + Info / Angle
Yellow / Angle	Yellow / YouTube / Repeat
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Blue / D.Dis	Blue / Prime Video / Random
Blue / D.Dis	Shift + Display / Media
Up / PR+	CH+ / Page+
Up / PR+	Up
Left / Vol-	Left
Left / Vol-	Vol-
OK	OK
Right / Vol+	Right
Right / Vol+	Vol+
Down / PR-	CH- / Page-





Originale	Sostituto
Down / PR-	Down
Source	AV / Input / RDS
Sleep	Sleep / Timer
Info	Info / Angle
Menu	Menu / Home
Repeat / TXT	Text / Goto
Repeat / TXT	Shift + Green / APP / REPEAT
A-B / Hold	Shift + Stop /
A-B / Hold	Shift + Yellow / YouTube / REPEAT A-B
Language / Mix	Shift + Audio / Lang I/II
Subtitle /	Subtitle / EQ
Setup / Index	Setup / OPT /
DVD Menu /	D.Menu / Top
DVD Menu /	Shift + Zoom /
Title / Reveal	Shift + Sound / Title
Zoom / Cancel	Zoom / Size
Zoom / Cancel	Shift + Exit / Cancel / Clear

Originale	Sostituto
Play/Pause / EPG	Play / Slow
Play/Pause / EPG	Guide / EPG / -/-
Play/Pause / EPG	Pause / Step / Freeze
Stop / List	Stop / Hold
Stop / List	Smart / List
<< / DTV/Radio	<< / Tune-
<< / DTV/Radio	TV/Radio /
>> / FAV	>> / Tune+
>> / FAV	Fav / Marker / PC
I<< / Page	I<< / Preset-
>>I / Page Up	>>I / Preset+
Exit	Exit / Cancel / Clear
D.Vol+ / FAV+	Shift + Vol+
Rec	Rec / Rec Mode
Media	Display / Media
Still	Shift + Pause / Step /
D.Vol- / FAV-	Shift + Vol-

