






 
 
 
 

 




 

 
 



 


 










Originale	Sostituto
 Standby - On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Browser	 Smart
 Timer	 Sleep
 Menu System	 Menu
 Menu Disc	 D. Menu
 Up	 Up
 CH+	 Ch +

Originale	Sostituto
 CH-	 Ch -
 Down	 Down
 OK	 Ok
 Right	 Right
 Left	 Left
 Play	 Play
 Select	 Info
 Edit	 TV/R
 Stop	 Stop
 Rec	 Rec
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Return	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Originale		Sostituto	
	Blue		Blue
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	T/C		Guide
	Rec Mode		Shift + Rec
	Tuner		Subt
	TV / DVD		AV

Originale		Sostituto	





Originale	Sostituto
Standby - On	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Timer	Sleep
Up	Up
CH+	Ch +
CH-	Ch -
Down	Down
OK	Ok

Originale	Sostituto
Rec	Rec
Return	Back
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Tuner	Subt
T/C	Guide
Tv Vol+	Vol +
Tv Vol-	Vol -
TV / DVD	TV/R
Menu System	Menu

