

 

 
 
 





 

 



 


 

 
 
 
 
 



 


 

 
 


 


 
 
 
 
 
 
 


 
 
 
 





 




 
 




 

 
 

 

 
 
 
 
 

 

 


 



Originale	Sostituto
 Standby - On	 Power
 TV / DVD	 AV
 Edit	 TV/R
 Select	 Info
 CH+	 Ch +
 Up	 Up
 Down	 Down
 CH-	 Ch -
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu Disc	 D. Menu
 Menu System	 Menu
 Timer	 Sleep
 T/C	 Guide
 Browser	 Smart
 Tuner	 Subt

Originale	Sostituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop	 Stop
 Play	 Play
 Rec	 Rec
 Pause	 Pause
 Rec Mode	 Shift + Rec
 I<<	 I<<
 >>I	 >>I





Originale	Sostituto
 Standby - On	 Power
 TV / DVD	 TV/R
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 OK	 Ok
 Menu System	 Menu
 Timer	 Sleep
 T/C	 Guide
 Tuner	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 Rec	 Rec
 Return	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv Vol-	 Vol -
 Tv Vol+	 Vol +

