



| Originale      | Sostituto     |
|----------------|---------------|
| Power          | Power         |
| 1              | 1             |
| 2              | 2             |
| 3              | 3             |
| 4              | 4             |
| 5              | 5             |
| 6              | 6             |
| 7              | 7             |
| 8              | 8             |
| 9              | 9             |
| List           | Smart / List  |
| 0/Quick Access | 0             |
| Vol+           | Vol+          |
| Mute           | Mute / Dimmer |
| CH+            | CH+ / Page+   |
| Vol-           | Vol-          |
| CH-            | CH- / Page-   |

| Originale   | Sostituto                 |
|-------------|---------------------------|
| Home        | Menu / Home               |
| *           | Setup / OPT /             |
| Up          | Up                        |
| Left        | Left                      |
| Wheel Up    | Shift + Up                |
| Right       | Right                     |
| OK          | OK                        |
| Wheel Down  | Shift + Down              |
| Down        | Down                      |
| Back        | Back / Return             |
| Guide       | Guide / EPG / -/-         |
| Netflix     | Shift + Red / Netflix /   |
| Source      | AV / Input / RDS          |
| Prime Video | Shift + Blue / Prime      |
| Red         | Red / Netflix / Search    |
| Green       | Green / APP / Repeat      |
| Yellow      | Yellow / YouTube / Repeat |



